



Flatbed High Seat Installation

Supplied Hardware:

- 4x ½ Inch Bolts 2 Inches Long
- 8x ½ Inch Flat Washers
- 4x ½ Inch Nyloc Nuts

Required Tools:

- ½ Inch Drill Bit
- ¾ Inch Wrench
- Marker
- ¾ Inch Socket
- Will need multiple people to lift the high seat onto the bed.


Now that you have familiarized yourself with the hardware and the tools your going to need, we can begin installing, should take 30-40 min

1. With the help of another person lift highseat onto flatbed.
2. Move the highseat forward until you have a 2 inch gap between the front of the flatbed and the highseat.



3.

4. Place highseat as center as you can left to right.
5. Mark mounting points, there's two up front and two in the rear.

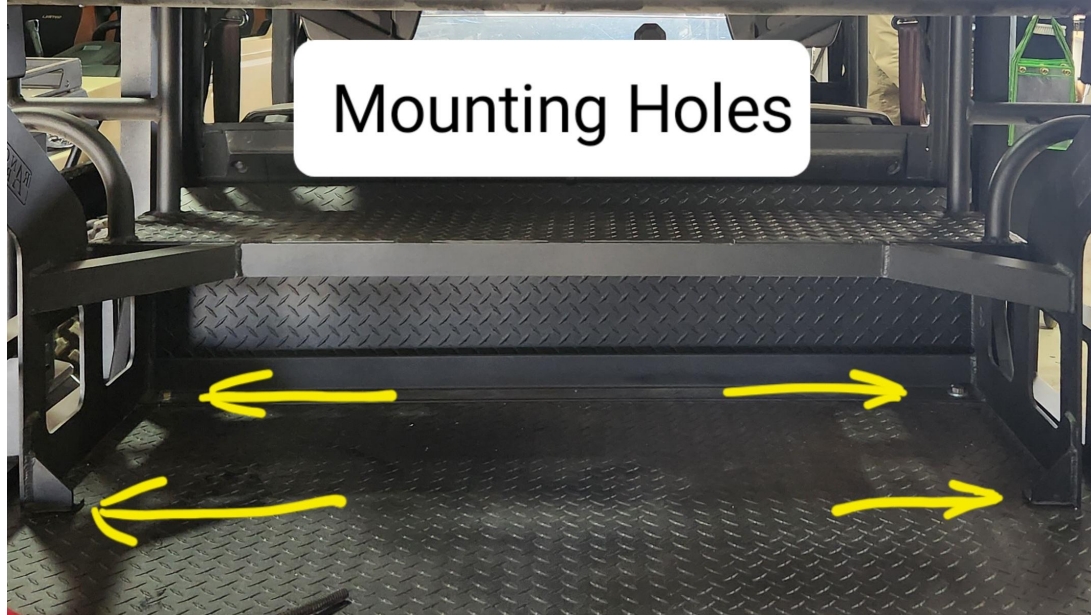

- 6.
7. Remove highseat and drill marked areas with a ½ inch drill bit.
8. Replace the highseat and install using the supplied ½ inch bolts, flat washers and nyloc nuts.
- 9.
10. Tighten all hardware using a ¾ inch socket and wrench.

You are good to go! Enjoy your Ranch Armor High Seat. We appreciate your business very much!

If you have any questions you are always welcome to reach out to us. Visit <http://www.RanchArmorUTV.com> for more accessories.

Danger! Climbing, Sitting, Standing, Riding, while the vehicle is in motion can cause severe injury or death, use at your own risk.