



## **Kawasaki Front Roll Bar Basket Installation**

### **Supplied Hardware:**


- 4x 5/16 inch Bolts 1 inch long
- 8x 5/16 Washers
- 4x 5/16 Nyloc Nuts
- 2x Roll Bar Basket Brackets

### **Required Tools**

- Flat tip screwdriver
- ½ inch Deep Socket and Ratchet
- ½ Wrench
- 17mm Socket
- 17mm Wrench

Now that you have familiarized yourself with the hardware and the tools you're going to need, we can begin installing, should take 15-20 min.

1. Locate the four 17mm bolts on the front roll bar (two on each side).
2. Starting on one side (do not remove all four, start with one side at a time) remove both 17mm bolts.
3. Taking a flat tip screwdriver, pry the roll bar apart until you get a large enough gap to install the bracket between the roll bar.

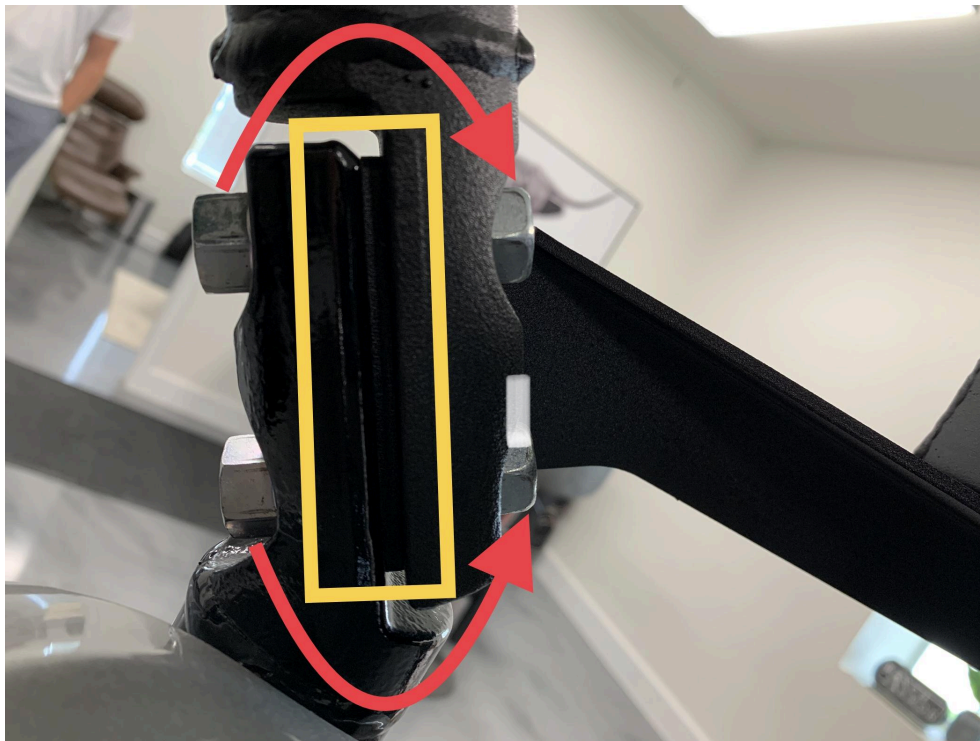

4. Reinstall 17mm bolts and tighten.
5. Repeat steps for the opposite side.

6. Once both brackets are on and tight, install the basket onto the brackets and secure using supplied 5/16 inch bolts, washers and nyloc nuts.



You are good to go! Enjoy your Ranch Armor Front Roll Bar Basket. We appreciate your business very much!

If you have any questions you are always welcome to reach out to us. Visit <http://www.RanchArmorUTV.com> for more Kawasaki Mule Pro accessories.